

# zerofobika

## SCHEDA TECNICA

MIX CH.	INSTRUMENT	MICROPHONE	OUTBOARD	EFFECT
1	KICK	SHURE BETA 52, AKG D112	DBX 166 XL	
2	SNARE	SHURE BETA 57	DBX 166 XL	REVERB 1
3	HAT	SHURE BETA 57		
4	HI TOM	SHURE BETA 56, AKG DD22		
5	MID TOM	SHURE BETA 56, AKG DD22		
6	LOW TOM	SHURE BETA 56, AKG DD22		
7	FLOOR TOM	SHURE BETA 56/BETA 57		
8	OVERHEAD L	SHURE KSM 137, RODE NT5,		
9	OVERHEAD R	SHURE KSM 137, RODE NT5,		
10	BASS	D.I. BOX	DBX 166 XL	
11	GIUITAR	SHURE BETA 57	DBX 166 XL	REVERB 1
12	GIUITAR	SHURE BETA 57		
13	GIUITAR ACUSTIC	D.I. BOX		
14	PIANO RIGHT	D.I. BOX		
15	PIANO LEFT	D.I. BOX		
16	TASTIERA	D.I. BOX		
17	TASTIERA	D.I. BOX		
18	MALE VOCAL	SHURE BETA 58 a o beta 87 RADIO	DBX 166 XL	REVERB2
19	MINIDISK O PC			
20	MINIDISK O PC			
21	TASTIERA	D.I. BOX		
22	TASTIERA	D.I. BOX		
23	LEXICON MX 300 (RVB 1)			
24	LEXICON MX 300 (RVB 2)			

MIXER: Mixer 28 canali Soundcraft MH2 o simile, o con almeno 8 mandate Aux pre-fader e post-fader.

OUTBOARD: N. 4 Dbx 166xl

EFFETTI: N. 2 Lexicon Pcm 91 o Mx 300

PEDANA batteria

PEDANA tastierista

# ZEROFOBIKA

## STAGE PLAN

